# PORTA GOL



Please Note:

Thanks for purchasing Pro Sports Group's Porta Gol Flexi Goals. These goals set up and pack up in a matter of minutes. They are not designed to be left outside for an extended period of time. Please prolong the life of your goal by packing it away after each use.

For more information or other innovative Soccer gear. Please visit www.ProSportsGroup.com.au

#### WARNINGS


- Must be assembled by an adult.
- To be used on a flat surface.
- Check the frame is securely and fully assembled with the net before use.
- Guaranteed for use by persons Under 12yrs
- Side Poles should be stored with Top Pin plastic parts facing away from each other.
- Check the goal is securely located with the ground before use.
- Disassemble after use.
- Do not leave outdoors in adverse weather conditions or for a prolonged period of time.
- Do not climb or hang on the structure.
- Regularly check for wear and tear. Stop using the goal if any part of it brakes. Failure to do this may result in injury.
- Keep away from fire.
- Keep away from heat sources.


NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS DUE TO SMALL PARTS

#### Step 2 Attach the post to the frame.

**NET AND POSTS** 



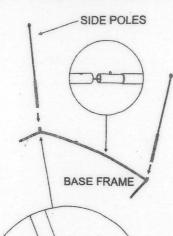

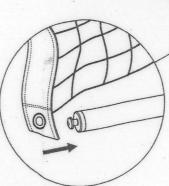


CAUTION: Goal is under tension when assembled. Please take the utmost care when releasing the tension during disassembly. Failure to do this may result in injun

### CONTENTS:

- BASE FRAME (X1)
- SIDE POLES (X2)
- NET AND POSTS (X1)
- GROUND HOOPS (X4)

## Step 3

Secure the net with the velcro and fix to the ground using four

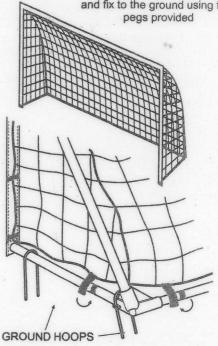

NOTE: To secure the frame properly to the ground, always anchor the goal with the ground hoops provided using a mallet.

CARE SHOULD BE TAKEN WHEN USING A MALLET. POLES CAN BE BENT IF DRIVEN TOO FAR INTO THE **GROUND (SEE BELOW)** 





CAUTION: Check that the ground hoops are secure regularly as a loose ground hoop may cause injury.